

## Dir 600L User Manual

D-Link



Wireless N 150 Home Cloud Router

DIR-600L

User Manual

**File Name:** Dir 600L User Manual.pdf

**Size:** 3003 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 28 May 2019, 22:40 PM

**Rating:** 4.6/5 from 785 votes.

**Status:** AVAILABLE

Last checked: 17 Minutes ago!

**In order to read or download Dir 600L User Manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dir 600L User Manual . To get started finding Dir 600L User Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Dir 600L User Manual

Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. This LED blinks during data transmission. This LED blinks during wireless data transmission. Press to initiate the WPS process. The LED will blink during the WPS configuration process. Ensure that you are able to use your computer to get on the Internet before disconnecting your computer from your modem. If you were using USB to connect before, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the router, then turn the modem back on. In some cases, you may need to call your ISP to change connection types USB to Ethernet. Place the router in an open area of your intended work area for better wireless coverage. Unplug the Ethernet cable from your modem that is connected to your computer. Plug it into the LAN port labeled 1 on the back of your router. The router is now connected to your computer. Plug the other end of this cable into the Ethernet port on your modem. Then connect the supplied power adapter into the power receptor on the back of the router and then plug into a power outlet or surge protector. Verify the power light is lit. Follow the onscreen instructions to configure your Internet settings. After setting up your router, you will be given the option to create a mydlink account. Go to [www.mydlink.com](http://www.mydlink.com) and enter your account information. This may be necessary if you have purchased an open box or resold unit. You can find software updates and user documentation on the DLink website as well as frequently asked questions and answers to technical issues. Other trademarks or registered trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11g and 802.11n specifications. Actual data throughput will vary. <http://project-st.ru/userfiles/calculus-single-variable-5th-edition-solution-manual.xml>

- **d-link dir-600l user manual, dir 600l user manual, dir 600l user manual pdf, dir 600l user manual download, dir 600l user manual free, dir 600l user manual instructions, dir 605l user manual.**

Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the package. Visit [dlink.com](http://dlink.com) US or [dlink.ca](http://dlink.ca) Canada for more details. It enables access to the Internet cloud via the mydlink service for remote network monitoring. This capability is yours with free downloadable iPad, iPhone and smartphone apps available on Apples App Store and the Android Market iPad users must download the mydlink Lite app. Such features permit you to keep tabs on website visits and intrusion attempts from any location. The router delivers advanced performance using wireless 802.11n technology, with greater speed and range than legacy 802.11g, allowing for data transfer rates of up to 150 Mbps. Enjoy complete compatibility The router will work with all WiFi certified devices, ensuring reliable performance no matter what type of electronics you're using. It's got a full security detail at its back, too, including an SPI Stateful Packet Inspection and NAT Network Address Translation firewall which also analyzes network traffic and WEP, WPA and WPA2 wireless encryption to safeguard your network against threats from hackers and would-be identity thieves. The cloud service detects and blocks unwelcome attempts to access your network, and shows a suspicious activity report right on your app or web browser. NAT permits multiple users to connect to the web by sharing one IP address. You'll love how easy the device is to set up, too. The Easy Setup Wizard and WiFi Protected Setup WPS enable simple, no-sweat

configuration and addition of new devices. Set up your wireless network in a matter of minutes. <http://shopcode.ru/uploads/calculus-solution-manual-pdf-free-download.xml>

The wizard guides you through each step, from installing hardware to connecting your network and adding devices. It also configures your ISP Internet Service Provider settings in order to rapidly establish broadband web connectivity. Plus, to help ensure that your router remains up to date with the latest and greatest features, the mydlink cloud service notifies you when updates are available. Connect your Cloud Router to a broadband modem to wirelessly share your high-speed Internet connection. Take advantage of web surfing, email and chat. Your recent browser history is displayed on the mydlink Lite app, too, enabling you to quickly get back to where you've been. Enjoy 4 Fast Ethernet ports affording you the versatility to connect wired devices to your network. Intelligent Antenna technology transmits numerous data streams by bouncing wireless signals off of walls allowing you to receive wireless signals even in the farthest reaches of your home! It is also quite common that customers throw out user manuals are also try Google Search! Thank you. User Manual GOgroove BlueSENSE TRM Bluetooth Audio Transmitter Posted by Joel Schwartz 20200917 192405 Please send pdf. Outgoing Mic volume Plantronics Audio 355 Headset 7973021 Posted by Donna J 20200917 191810 I can hear others fine but they can't hear me with the volume up 100% on the 355 model hardwired. Outgoing Mic volume Plantronics Audio 355 Headset 7973021 Posted by Donna J 20200917 191536 I can hear others fine but they can't hear me with the volume up 100% on the 355 model hardwired. Table of Contents. Package Contents. 4. System Requirements. 4. Features. 5. Hardware Overview. 6. Connections. 6. LEDs. 7. Installation. 8. Before you Begin. 8. Wireless Installation Considerations. 9. Wall Mounting Your Device. 10. Connect to Another Router. 12. Configuration. 14. Web-based Configuration Utility. 14. Setup Wizard. 15. Static assigned by ISP. 19. Internet Setup. 20. Dynamic. 20. PPPoE. 21 Wireless Setup. 25.

DLink DIR600 User Manual. LAN Setup. 31. DHCP Server Settings. 32. Time and Date. 33. Parental Control. 34. Port Forwarding. 35. Application Rules. 36. Access Control. 37. Advanced Wireless. 39. Advanced Network. 40. Routing. 41. Device Administration. 42. Save and Restore. 43. Firmware Update. 44. DDNS Setting. 45. System Check. 46. Schedules. 47. Log Settings. 48. Device Info. 49. Log. 50. Statistics. 51. Active Session. 51 Wireless. 52. Help. 53. Wireless Security. 54. What is WEP. 54. Configure WEP. 55. What is WPA. 56. Configure WPAPSK and WPA2PSK. 57 Configure WEP. 61. Configure WPAPSK. 63. Connecting to an Unsecured Wireless Network. 81. Troubleshooting. 85. Wireless Basics. 89. What is Wireless. 90. Tips. 92. Wireless Modes. 93. Networking Basics. 94. Check your IP address. 94. Statically Assign an IP address. 95. Technical Specifications. 96. Warranty. 98. Setting Up WiFi Protection. 65 Initial Router Configuration for WiFi Protection. 65. Setting Up a Configured Router. 66. Changing the Computer Name and Joining a Workgroup. 67. Configuring the IP Address in Vista. 69. Setting Up a Connection or Network Wirelessly. 72. Connecting to a Secured Wireless Network WEP. DLink DIR600 User Manual Package Contents. Note Using a power supply with a different voltage rating than the one included The product must be used with the power adapter included with the device. Note Always attach the power cord plug to the power supply, before inserting System Requirements DLink DIR600 User Manual Features This capability allows users to participate in realtime activities online, such as USB and Cardbus adapters. Domain Name. Configure your router to your specific settings within minutes. Network conditions and Environmental DLink DIR600 User Manual Hardware Overview. Connections. Pressing the Reset Button restores Receptor for the Power Adapter. LAN Ports. Connect Ethernet devices such as DLink DIR600 User Manual Cable or DSL modem. Hardware Overview. LEDs Power LED.

<http://fscl.ru/content/boss-ch1-super-chorus-pedal-manual>

A solid light indicates a proper DLink DIR600 User Manual Local Network LEDs. A solid light indicates a connection to an Ethernet-enabled computer on ports 14. This LED blinks during data transmission. Installation. This section will walk you through the installation process. Placement of

the router is very important. Do not place theBefore you Begin. Please configure the router with the computer that was last connected directly to your modem. Also, you can only useIf you were using the USB connection before using the router, then you must turn offIf you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as. WinPoet, Broadjump, or Ethernet 300 from your computer or you will not be able to connect to the Internet. DLink DIR600 User ManualWireless Installation Considerations. The DLink wireless router lets you access your network using a wireless connection from virtually anywhere withinKeep in mind, however, that the number, thickness and location ofTypical ranges varyA wall that is 1.5 feet thick .5 meters, at aAt a 2degree angle it looks over 42 feetA solid metal door or aluminum studs may have a negative effect onMaterials and objects such as glass, steel, metal, walls with insulation, waterThe base transmitsDLink DIR600 User ManualWall Mounting Your Device. You can mount the DIR600 to a wall or a partition for easy and convenient placement of your device. To wall mount your device. A. Screw the provided screws with the equipment to the wall or partition where the device to be placed. B. Place the mounting holes on the bottom of the device over the screws to mount it to the wall or partition. C. Connect your cables to the device. Step A. Step B. Step CDo not plug the power adapter into the router.WAN port on the router.Plug the other end into the Ethernet port onWait for the modem to boot about 30 seconds.

<https://gitagasht.com/images/Diesel-Manual-Transmission-Cars.pdf>

Wait about 30 seconds for the routerThe power light, WAN light, and the LAN light the port that your computer isIf not, make sure your computer, modem, and router are powered on and verify the cableDLink DIR600 User ManualConnect to Another RouterThe LAN ports on the router cannotTo connect to another router, please follow the steps belowConnect one of your computers to the router LAN port using an Ethernet cable. Make sure your IP address on the computer is 192.168.0.xxx where xxx is between 2 and 254. Please see the. Networking Basics section for more information. If you need to change the settings, write down your existing settingsIn most cases, your computer should be set to receive an IP address automatically inWhen the login window appears, set the userClick OK to continue.Uncheck the Enable UPnP checkbox. Click Save SettingsUncheck the Enable DHCP Server server checkbox. Click Save. Settings to continue.Click Save Settings toDLink DIR600 User ManualDo not plugTo configure yourRefer to the ConfigurationDLink DIR600 User ManualConfiguration. This section will show you how to configure your new DLink wireless router using the webbased configurationWebbased Configuration Utility. To access the configuration utility, open a webbrowserEnter the user name admin and your password. LeaveIf you get a Page Cannot be Displayed error, pleaseDLink DIR600 User ManualSetup Wizard. You may run the setup wizard from the opening. Internet Setup window to quickly set up your router. Click Internet Connection Setup Wizard, you willClick Next to continue. Create a new password and then click Next toDLink DIR600 User ManualSelect your time zone and NTPserver from the dropdown menuSelect the type of Internet connection you use and then click NextIf you selected Dynamic, you may need to enter the MAC address of theIf you are currentlyNext to continue. The Host Name is optional but may be required by some ISPs.

<http://aquaer.com/images/Diesel-Injector-Pump-Service-Manual.pdf>

The defaultDLink DIR600 User ManualIf you selected PPPoE, enter your PPPoE username and password. Click. Next to continue. Select Static if your ISP assigned you the IP address, subnet mask,Note Make sure to remove your PPPoE software from your computer. TheIf you selected PPTP, enter your PPTP username and password. Click. If you selected L2TP, enter your L2TP username and password. Click NextDLink DIR600 User ManualIf you selected Static, enter your network settings supplied by your InternetClick Connect to save your settings. Please allow 12 minutes for rebooting. When the router has finishedDLink DIR600 User ManualInternet Setup. Static assigned by ISP. Select Static IP Address if all WAN IP information is provided to you by your ISP. You will

need to enter in the IP address, subnet mask, Each IP address entered in the fields must be in the appropriate IP Address. Enter the IP address assigned by your ISP. Subnet Mask Enter the Subnet Mask assigned by your ISP. ISP Gateway Enter the Gateway assigned by your ISP. Address. MAC Address The default MAC Address is set to the WAN's physical Clone MAC The default MAC address is set to the WAN's physical. Address interface MAC address on the Broadband Router. You MAC address unless required by your ISP. Primary DNS Enter the Primary DNS server IP address assigned by your. Address ISP. Secondary DNS This is optional. MTU Maximum Transmission Unit you may need to change the. MTU for optimal performance with your specific ISP. 1492 DLink DIR600 User Manual Internet Setup. Dynamic. To manually set up the Internet connection, click the Manual Internet Connection Setup button on the Router's Access Checking this box disables NAT and turns the Router into. Point an Access Point only. Mode. Host The Host Name is optional but may be required by some. Name ISPs. The default host name is the device name of the. Router and may be changed. Secondary assigned by your ISP.

MTU Maximum Transmission Unit You may need to change the MTU for optimal performance with your specific ISP. DLink DIR600 User Manual Internet Setup. PPPoE. Choose PPPoE Point to Point Protocol over Ethernet if your ISP uses a PPPoE connection. Your ISP will provide This option is typically used for DSL services. Make sure to remove your PPPoE The software is no longer needed and will not work through a router. PPPoE Select Dynamic most common or Static. Select Static if your. ISP assigned you the IP address, subnet mask, gateway, and. DNS server addresses. User Name Enter your PPPoE user name. Password Enter your PPPoE password and then retype the password in Service Name Enter the ISP Service Name optional. IP Address Enter the IP address Static PPPoE only. DNS Enter the Primary and Secondary DNS Server Addresses Static. Addresses PPPoE only. Maximum Idle Enter a maximum idle time during which the Internet connection. Time is maintained during inactivity. To disable this feature, MTU Maximum Transmission Unit You may need to change the. MTU for optimal performance with your specific ISP. 1492 is Connection Select either Always on, Manual, or Connect on demand. Mode Select. DLink DIR600 User Manual Internet Setup Your ISP will provide you with This option is typically used for DSL services. PPTP Select Dynamic most common or Static. Select Static if IP Address Enter the IP address Static PPTP only. Subnet Mask Enter the Primary and Secondary DNS Server Addresses Gateway Enter the Gateway IP Address provided by your ISP. DNS The DNS server information will be supplied by your ISP Server IP Enter the Server IP provided by your ISP optional. PPTP Account Enter your PPTP account name. PPTP Password Enter your PPTP password and then retype the password Maximum Idle Enter a maximum idle time during which the Internet. Time connection is maintained during inactivity. To disable this MTU Maximum Transmission Unit You may need to change the. MTU for optimal performance.

Connect Mode Select either Always on, Manual, or Connect on demand. DLink DIR600 User Manual Internet Setup Your ISP will provide you with a This option is typically used for DSL services. L2TP Select Dynamic most common or Static. Select Static IP Address Enter the IP address Static L2TP only. L2TP Account Enter your L2TP account name. L2TP Enter your L2TP password and then retype the password. Password in the next box. Maximum Idle Enter a maximum idle time during which the Internet. MTU for optimal performance with your specific ISP. Dual Access for Russia only. There are two main steps to configure a Dual Access Internet connection for Russia. First, configure a PPPoE connection as previously Second, configure a PPTP connection In addition, the second step also includes an option to use a MAC address that will always The MAC address is entered manually or copied from the computer. DLink DIR600 User Manual Wireless Setup. Wireless settings for the router may be configured To use the wizard, To configure the wireless settings manually, click The parameters for this window are described later Click Next to continue. Enter a Wireless Network Name in the textbox, which DLink DIR600 User Manual Enter a Wireless Security Password in the textbox and then click. This window displays a summary of your wireless security

settings. Please print this out or record this information in a safe place and The Router will save your new settings and reboot. When it is finished DLink DIR600 User Manual WiFi To implement WiFi protection, or WCN 2.0, tick the Enable. Protected checkbox, click either Generate New PIN or Reset PIN to. Setup Default, and then configure the WiFi settings below. Please Vista section later in this manual for detailed configuration Enable Check the box to enable the wireless function. If you do. Wireless not want to use wireless, uncheck the box to disable all the Wireless Service Set Identifier SSID is the name of your wireless. Network Name network.

Create a name using up to 32 characters. The SSID is case sensitive. Enable Indicates the channel setting for the DIR600. By default. Wireless the channel is set to 6. The Channel can be changed to. Channel fit the channel setting for an existing wireless network or The Auto Channel. Selection setting can be selected to allow the DIR600 to Transmission Use the dropdown menu to select the appropriate Transmission Rate in Mbits per second. Many users will want to use the. Rate default setting, Best automatic. WMM Enable Enable WiFi Multimedia to enjoy basic quality of service features. WMM prioritizes traffic according to four access categories Enable Hidden Check this option if you would not like the SSID of your wireless network to be broadcasted by the DIR600. If this option is. Wireless checked, the SSID of the DIR600 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID DLink DIR600 User Manual To enable WEP, select Enable WEP Wireless. Security basic. Make sure you You may enter up to four different keys either using. Hex or ASCII. Hex is recommended letters AF and In ASCII all numbers and DLink DIR600 User Manual Router before your wireless network adapters. Please establish Your wireless WPA2 whichever of the three options you have DLink DIR600 User Manual Wireless Security enhanced. Auto. RADIUS server. 1812 is the default port. IP address, port, and secret key. DLink DIR600 User Manual LAN Setup. This section will allow you to change the local network settings of the router and to configure the DHCP settings. Router IP Enter the IP address of the router. The default. Address IP address is 192.168.0.1. If you change the IP address, once you click. Apply, you will need to enter the new IP address Default Subnet Enter the Subnet Mask. The default subnet mask. Mask is 255.255.255.0. Local Domain Enter the Domain name Optional. Name. Enable DNS Check the box to transfer the DNS server. Relay information from your ISP to your computers.

If Refer to the next page for DHCP information. DLink DIR600 User Manual DHCP Server Settings. DHCP stands for Dynamic Host Control Protocol. The DIR600 has a builtin DHCP server. The DHCP. Server will automatically assign an IP address to the Automatically." When you turn your computers The DHCP Server IP address pool. Enable DHCP Check the box to enable the DHCP server on. Server your router. Uncheck to disable this function. DHCP IP Enter the starting and ending IP addresses for. Address Range the DHCP server's IP assignment. DHCP Lease The length of time for the IP address lease. Time Enter the Lease time in minutes. DLink DIR600 User Manual Time and Date. This section will allow you to configure, update, and maintain the correct time on the internal system clock. Time Select the Time Zone from the dropdown. Zone menu. Enable Ticking this checkbox enables Daylight Saving. Daylight time. Click Sync. your computer's time. Saving settings to copy your PC's time settings. NTP Tick the "Automatically synchronize with. Server DLink's Internet time server" checkbox and. Used then use the dropdown menu to select an NTP. Server. NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a Manual To manually input the time, enter the values Minute, and Second. Click Save Settings. DLink DIR600 User Manual Parental Control. This feature allows you to create a list of websites that you want to either allow or deny users access. Configure Select Turn Parental Control OFF, Turn Parental Control ON and ALLOW computers access to. Control ONLY these sites, or Turn Parental Control ON Website URL Enter the keywords or URLs that you want to Schedule The schedule of time when the parental control The schedule may be set You can create your DLink DIR600 User Manual Port Forwarding. This will allow you to open a single port or a range of ports. Rule Check the box to enable the rule. Name Enter a name for the rule.

IP Address Enter the IP address of the computer on your local network. End Port you want to open one port, enter the same port in Start Port. Traffic Type Select TCP, UDP, or Any. DLink DIR600 User Manual Application Rules. Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and VoIP. Special Applications Rule Check the box to enable the rule. Trigger Port This is the port used to trigger the application. It is the port number on the WAN side that the Firewall Port will be used to access the application. You may select Traffic Type. Select TCP, UDP, or Any. DLink DIR600 User Manual QoS Engine. The QoS Engine option helps improve your network gaming performance by prioritizing applications. By default the QoS Engine settings are disabled and application priority is not classified automatically. Enable QoS This option is disabled by default. Enable this option. Uplink Speed This option is enabled by default when the QoS Engine option is enabled. This option will allow you to measure the speed of your Internet connection. Uplink Speed. The speed at which data can be transferred from your computer to the Internet. Alternatively you can check the speed as www.dslreports.com. Type Detected xDSL or Frame Relay Network. If you have an unusual network connection in which you are actually using xDSL or Other Frame Relay. Network causes the measured uplink speed to be reported slightly lower than before on such connections. Detected but gives much better results. When Connection Type is set to automatic, the automatically detected connection type is displayed here. DLink DIR600 User Manual MAC Filter. Use MAC Media Access Control Filters to allow or deny LAN Local Area Network computers by their MAC addresses. You can either manually add a MAC address or select the MAC address from the list of MAC addresses. Turn MAC Filtering OFF, Turn MAC Filtering. Filter ON and ALLOW computers listed to access the network. MAC Address Enter the MAC address you would like to filter.

To find the MAC address on a computer, please refer to the DHCP Client Select a DHCP client from the dropdown menu and.

<https://formations.fondationmironroyer.com/en/node/11966>