 


Canon



PIXMA MP460

User's Guide



ENG

**File Name:** canon mp460 user manual.pdf

**Size:** 3146 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 12 May 2019, 17:56 PM

**Rating:** 4.6/5 from 831 votes.

**Status: AVAILABLE**

Last checked: 1 Minutes ago!

**In order to read or download canon mp460 user manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon mp460 user manual . To get started finding canon mp460 user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# canon mp460 user manual

CarePAK offers tollfree Canon technical support and includes Canon's superb InstantExchange product replacement program. All rights reserved. No part of this publication may be transmitted or copied in any form whatsoever without expressed written permission from Canon Inc. Using the machine in such conditions may result in fire or electrical shock. Then contact your local authorized Canon dealer or the Canon help line. Pulling on the power cord may damage the cord and cause a fire or electrical shock. However, if the machine is unplugged during printing, the FINE Cartridge is not protected with the cap that prevents the ink from drying. Then, contact your local authorized Canon dealer or the Canon help line. Do not shake FINE Cartridges Ink Cartridges. Ink may leak out and stain clothing or the surrounding area. Never touch the nozzle and the gold terminal. The following symbols are used to indicate important instructions. Be sure to obey these instructions. Indicates a warning concerning operations that may lead to death or Warning injury to persons if not performed correctly. Machine Exterior 1 Document Cover Covers the Platen Glass. Open this cover when loading a document on the Platen Glass. 2 Paper Support Supports paper loaded in the Auto Sheet Feeder. For details, contact your local Canon service representatives. Rear view and interior. Before turning ON the machine, make sure the Document Cover is closed. 2 Alarm Lamp Lights if an error occurs, or when the paper or ink runs out. Chapter 1 Before Printing. This ensures the FINE Cartridge is covered to prevent it from drying out. If the printed area is traced with a highlight pen or paintstick or stained with water or sweat, ink may blur. Before Printing other than Canon genuine paper Chapter 1. Paper Type Model Super White Paper SW201 High Resolution HR101N Approx. 80 sheets. Printing from your You may be able to load other computer envelopes, but Canon cannot guarantee consistent performance. <http://www.alterconseil.fr/alterconseil/images/integrative-manual-therapy-practitioners.xml>

- **canon mp460 instruction manual, canon mp460 service manual, canon pixma mp460 user manual, canon mp460 printer user manual, canon mp460 user manual, canon mp470 user manual, canon mp460 user manual download, canon mp460 user manual pdf, canon mp460 user manual software, canon mp460 user manual free.**

Do not use the following types of envelopes since they may cause problems. Place a stack of paper print side up in the Auto Sheet Feeder 1, pinch the Paper Guide A and adjust it to the left side of the stack 2. Set the Paper Thickness Lever to the correct position for the paper. Prepare the envelopes for loading. Important Before Printing Press down firmly on the edges of the envelopes to make the folds crisp. Also, press firmly on the area that corresponds to the edges of the back flap. Load the envelopes in the Auto Sheet Feeder with the short side down. Set the Paper Thickness Lever to the right. To Change Print Settings You can change the print settings such as page size, media type, bordered or borderless print, etc. How to change the Settings screen This section describes the steps to specify the page size for Memory card mode to Change to here. Complete setting. This function makes green and blue more lively. This function automatically optimizes brightness and tone of a photo. See "Loading Paper" on page 23. Start copying. Prepare for copying. For details on changing the copy settings and setting items, see "Changing The Print Settings" on page 26. 1 You can specify the page size. 2 You can specify the media type. The Special copy screen is displayed. Procedure 1 Display the Special copy screen. You can set the machine to automatically select the number of times it repeats the image, or you can specify the number. Memory Cards Supported By This Machine Supported memory cards are as follows Memory Cards which can be

inserted directly Memory Cards which can be used through a special adapter Purchase a CompactFlash Card Adapter for xDPicture Card separately. Open the Card Slot Cover. Printing From A Memory Card This machine accepts images taken with a camera compatible with the Design rule for Camera File system Exif 2.21 compliant and DPOF Ver. SmartMedia Card Install this card into the right card slot.<http://www.archipel-nautisme.com/fichiers/integrative-manual-therapy-school.xml>

Printing A Photo Displayed On The LCD Singlephoto Print Turn ON the machine. Load the paper in the Auto Sheet Feeder. See "Loading Paper". See "Changing The Print Settings" on page 26. Specifying How Many Copies To Print For Each Photo Multiphoto Print You can specify how many copies to print for each photo. If more than 37 photographs are to be printed, the machine prints them Note on more than one Photo Index Sheet. 1 Select the page size and media type. 2 Select date printing as necessary. 3 Mark this to print one copy of each photograph. Good 1 Check mark 2 Line only 3 Light Important Load the paper selected on the Photo Index Sheet in the Auto Sheet Feeder. When printing image data using a Photo Index Sheet, you can select Note Important Note Other Useful Functions The following functions are available when printing from a memory card "Printing Several Photos On A Single Sheet Of Paper Layout Print". If you select. Prepare for printing. When a memory card is already inserted, connecting the machine to a computer results in the memory card drive removable hard disk being displayed on the desktop. Printing With Windows Menu and command names may differ between software applications, and Note more steps may be required. For details, refer to the documentation for each software application you use. For print settings, see the Onscreen Manual. For details, refer to the documentation for each software application you use. Note Printing From Your Computer When you select the print mode appropriate to your document from. The document is scanned. The settings configured from MP Navigator apply when scanning. If with some types of original the position and size of the image is not Important scanned in correctly, please refer to "Selecting the Behavior of the Operation Panel with MP Navigator". PictBridge is an industry standard enabling a range of digital photo solutions, Note including the direct printing of photos from compatible digital still cameras,.

This size can be selected only for Canon PictBridge compatible devices note that it cannot be selected for some models. You can also print photos received from Bluetooth compatible mobile phones or PCs using the optional Bluetooth unit BU20. When performing infrared communication, also refer to your mobile phone manual. Prepare to print. 1 Turn ON the machine and load the paper in the Auto Sheet Feeder. See "Loading Paper". Printing will start after receiving all data. Note Printing Photos From A Wireless Communication Device For the procedure to print from your mobile phone, refer to your mobile. For performing Bluetooth communication, refer to the Bluetooth User's Guide. See also the manuals supplied with your Bluetooth compatible device. Prepare to print. Setting a passkey will help prevent interference from other Bluetooth devices. 3 Selecting ON will disable search and printing from Bluetooth devices. Display the Device settings screen. Example select. Depending on the functions you use, some setting items cannot be Note specified in combination. Print Settings Quiet mode Use this function if you want to reduce any operating noise, such as when printing at night. Device name Specifies the name of this machine that is displayed on a Bluetooth compatible device. Access refusal When this is set to, the machine denies access from a Bluetooth compatible device. Security When this is set to, the passkey can be specified. When is selected, images are displayed at 5second Note intervals. When is selected, images are displayed at different time intervals according to their resolutions. Language Selection Changes the language for LCD messages. Replace the empty FINE Cartridge with a new one. Important Do not touch the transparent film A, film cable B, ink absorber sponge Caution part C, or any metal parts. Routine Maintenance Handle FINE Cartridges carefully to avoid staining your clothes or the surrounding work area. Important Insert the new FINE Cartridge.

Black FINE Cartridges should be installed into the left holder B and Color FINE Cartridges should

go into the right holder C. Important Routine Maintenance To maintain optimal print quality, we recommend that you use Canon brand FINE Cartridge. Replenishing ink only is also not recommended. Replace the FINE Cartridge promptly. Do not leave with the FINE Cartridge removed. Should missing characters or white streaks appear despite sufficient ink Note levels, see "When Printing Becomes Faint Or Color Is Incorrect" on page 84. See "An Error Message Is Displayed On The LCD" on page 98. Chapter 10 Routine Maintenance. It also appears automatically during printing. When the "!" mark appears on the Low Ink Warning The ink level of the FINE Cartridge showing the "!". However the same printing quality cannot be expected, compared to printing with both cartridges. In this case, the remaining level of ink cannot be calculated correctly. We recommend that you replace the FINE Cartridge with a new one. Follow the procedures below to clean these nozzles. Before Performing Maintenance Note Remove the FINE Cartridge once, then reinsert it into place. See "Replacing A FINE Cartridge". Use this function when the printed results are blurred or the color is incorrect. The pattern print confirmation screen is displayed. Examine the nozzle check pattern output by the machine. If the lines are broken 1, or white lines 2 are present in the pattern A, replace the relevant ink tank. Chapter 10 Routine Maintenance. Cleaning the FINE Cartridge Nozzles consume inks, so perform FINE Cartridge Cleaning only when necessary. Ensure that the machine is turned ON and the Scanning Unit is closed. See "Replacing A FINE Cartridge" on page 75. If FINE Cartridge Deep Cleaning does not improve the print quality even if Note you have replaced the Cartridge, contact a Canon service representative. Routine Maintenance Chapter 10.

With the machine ON, load a sheet of A4 or Lettersized plain paper in the Auto Sheet Feeder. Move the Paper Thickness Lever to the left position. Print the pattern. When loading the checked sheet, place the front side down, and align the upper left corner of the sheet with the alignment mark on the lower right corner of the Platen Glass. Caution Cleaning The Platen Glass And Document Cover Wipe the Platen Glass A, and the inner side of the Document Cover white area B with a clean, soft, lintfree cloth moistened with water. Then wipe with a clean, soft, dry, lintfree cloth making sure not to leave any residue, especially on the Platen Glass. The sheet of paper is automatically fed in and then out of the machine. Note Routine Maintenance If there are no signs of improvement after performing three times, contact a Canon service representative. Chapter 10. Periodic cleaning of certain parts on the inside of your machine is recommended to maintain a high standard of printing quality. The parts can be cleaned in the following ways See "Cleaning The Bottom Plate". The paper is ejected. Inspect the discharged paper. This section provides troubleshooting tips for the most common printing Note problems. If you cannot find appropriate tips for your problem, refer to the on screen manuals. Canon recommends to use new genuine Canon Cartridges in order to obtain optimum qualities. Chapter 11. If the same error occurs, contact a Canon service representative. Action Adjust the contrast of the LCD in the. FINE Cartridge nozzles clogged or shifted. Print Quality is not set properly. Media not loaded printside up. The paper stack exceeds the capacity of the Auto Sheet Feeder. There is some foreign matter in the Auto Sheet Feeder. The Paper Output Tray is closed. It may solve the problem. Delete an undesired print job, if there is any. The hard disk does not have enough available space. When Copying Cause The document is not loaded correctly.

The quality image quality displayed on the LCD is not suitable for the document. Follow the steps described below to clean the inside of the machine. 1. Inappropriate paper type is used. Thick paper is used. Media is curled. Troubleshooting Action Follow the steps described below to clean the paper feed rollers. 1. Ensure that the machine is turned ON and there is no paper loaded in the machine. Slide the paper guides against the paper stack. Action Use Photo Paper Pro or other Canon genuine media to print images that have a high color saturation. See "Paper Types You Cannot Use" on page 16. Important You cannot load Credit Cardsized paper in the landscape orientation. An Unintended Language Is Displayed On The LCD. Cause The language you want to be displayed is not selected. Chapter 11 Action Make sure all required boxes on the Photo Index Sheet are filled in, and that the

sheet is set in the correct position and orientation on the Platen Glass. The error messages and operations may vary depending on the camera you are using. If you are using a nonCanon PictBridgecompatible camera and not sure how to clear the printer error from the camera, confirm the message displayed on the LCD of the machine and clear the error. Prepare a new FINE Cartridge. Select Continue in the display on your camera to resume printing. For problems when printing via Bluetooth communication, refer to the Bluetooth User's Guide.If the CDROM icon is not displayed on the desktop, there is a problem with the CDROM. Contact a Canon service representative.Make sure the CDROM is readable from Windows Explorer. ScanGear Wont Start Cause Scanner driver ScanGear is not installed. Machine may not be selected. The application program used does not support calling up ScanGear. An error message appears and the ScanGear window fails to appear. Specification of the application program. Dirty Platen Glass or Document Cover. The status of the original is poor.

The color of a preview image or a scanned image is different from the original when scanning an image with a plain background like the blue. Observe the following when outside the supported area.Error arising from Some application softwares do not support multiple image scanning. Scan each application software item individually without using the MultiScan or MultiCrop function. Scanned Image Is Not Displayed Properly Cause Scanned image prints out enlarged reduced. Scanned image enlarged reduced on the computer monitor. Scanned image wont open. Trouble scanning with MP Navigator Cause The original may not be scanned. A USB port is selected if either USBnnn Canon MP460 or MPUSBPRNnn Canon MP460 where n is a number is indicated. Once the ink absorber becomes completely full, printing cannot be done until the ink absorber is replaced. Canon recommends that you contact a Canon service representative as soon as possible. Action Disconnect the camera cable and reconnect the cable. The Scanning Guide cannot be displayed. Insert the Setup CDROM into your computer and install the onscreen manuals instruction manuals. Canon support staff are trained to be able to provide technical support to satisfy customers. Attempts by customers to repair or take apart the machine will invalidate any Caution warranty regardless of whether the warranty has expired. Recommended printing Canon recommends that you print within this area. area Printable area The area where it is possible to print. Note that this uninstall procedure will uninstall all guides.If you do not have the original packing materials, pack the machine carefully using protective material and a sturdy box. Turn the machine OFF and unplug the machine. Printing on this paper is available only when the Layout function on your camera has a 16up option. See "Recommended Paper" on page 17. If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A. TEL No. 15163285600 Chapter 12 Appendix. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your defective Product and for a shipto location for the replacement Product must include street address. All rights reserved. Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. All other product and brand names are trademarks of their respective owners. The following FINE Cartridges High Yield are also compatible with this machine. For details on FINE Cartridge replacement, refer to "Replacing A FINE Cartridge" in this guide. We have 8 Canon PIXMA MP460 manuals available for free PDF download Quick Start Manual, User Manual, Service Reference Manual, Supplementary Manual, Brochure, Instrucciones De Instalacion. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file.Scroll down to see your support options. You can also click one of these links to

search our extensive Knowledge Base or visit the Canon Community Forum. Subject to certain terms and conditions. See [www.canontechsupport.com](http://www.canontechsupport.com) for details. The driver may be included in your OS or you may not need a driver.

Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size  
Recommended Software File Name Date File Size Optional Software File Name Date File Size  
Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size

Warranty repair or replacement shall not extend the original warranty period of the Product. A dated proof of purchase is required at the time of warranty service. A copy of your dated bill of sale will satisfy this requirement. This warranty does not cover any accessories, or any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement. Repairs of such Canon brand peripheral equipment shall be governed by the terms of the Separate Warranty. The sole warranty, if any, with respect to such nonCanon brand items is given by the manufacturer or producer thereof. Without limiting the foregoing, dropping the Product, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the users manual or other documentation for the Product. The name and telephone number of the ASFs near you may be obtained from Canon USAs Web site at [www.canontechsupport.com](http://www.canontechsupport.com) or by calling the Canon USA Customer Care Center at 18008284040, or any time while speaking to a technical support person. A Product covered by this limited warranty will be repaired or exchanged, as determined by Canon USA, and returned without charge by the ASF. If the problem cannot be corrected over the telephone, and you elect the InstantExchange option, a reference number will be issued to you. You will be asked for the Product serial number and other information pertaining to your Product and for a ship to location for the replacement Product must include street address. After receipt of the replacement Product with instructions and a prepaid waybill, follow the enclosed instructions on how to ship your product to the Canon USA repair facility.

Your Product must be returned in the shipping carton in which the replacement Product was packed and include the reference number, A COPY OF YOUR DATED PROOF OF PURCHASE BILL OF SALE, and a complete explanation of the problem. Canon USA does not guarantee same day shipment in the event of the occurrence of factors beyond its reasonable control. The replacement Product you receive may be a refurbished or reconditioned unit and will be covered for the balance of the period remaining on your original limited warranty. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Perfect for creating any type of Greeting Card with an extensive variety of downloadable templates from the Canon Inc. Glossy finish for impressive photos. Genuine Canon Paper for quality images. An economical choice for great prints. An economical choice for great prints. Optimize output resolution to create nearphotographic images. This paper is great when you want highquality color output to produce winning reports and eyecatching graphics. Use with genuine Canon Photo Inks for true photoquality output. Package includes 100 sheets. Great for portrait and wedding and fine art photography prints. Package includes 50 sheets. Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! Simply print your photos on the included 2 sided paper, slide the pages easily into the album, and share your memories! This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 120 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 50 sheets. This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Package includes 20 sheets.

This paper yields a glossy finish and exceptionally right color, giving your images the look and feel of a traditional photograph. Includes 20 sheets per pack. Learn about the technology behind the paper. Learn about the technology behind the paper. Learn about the technology behind the

paper. Learn about the technology behind the paper. Learn about the technology behind the paper. Package includes 20 sheets. Package includes 15 sheets. High quality photos print right onto a sticker sheet, so just peel and stick. 16 stickers per sheet. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. Photo Paper Plus SemiGloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home. You may download and use the Content solely for your personal, noncommercial use and at your own risks. Canon shall not be held liable for any damages whatsoever in connection with the Content, including, without limitation, indirect, consequential, exemplary or incidental damages. You shall also not and shall not let others reproduce, modify, reformat or create derivative works from the Content, in whole or in part. We know from our users' experience that most of people do not really attach importance to these manuals. Many instructions, immediately after the purchase, go into the trash along with the box, which is a mistake. Get acquainted with the information concerning the manual for Canon MP460, which will help you to avoid troubles in the future.

You will then acquire basic knowledge to maintain Canon MP460 in good operating condition to make it easily reach the intended life cycle. Then you can put away the manual on a shelf and use it again only in a situation where you're not sure whether you perform maintenance of the product appropriately. Proper maintenance is a necessary part of your satisfaction from Canon MP460. Once a year, clean the closet where you keep all your devices manuals and throw out the ones that you don't use. This will help you maintain order in your home base of manuals. Why is it worth reading? If something bad happens while using a Canon MP460, you will have a set of documents that are required to obtain warranty repairs. It is in this part of the manual that you will also find information about the authorized service points of Canon MP460 as well as how you can properly maintain the device by yourself so as not to lose the warranty for the product. Use the instructions of the Canon MP460 manufacturer to run the product properly, without unnecessary risk of damage to the equipment. You will also be able to find out what optional parts or accessories to Canon MP460 you will be able to find and buy to your device. This is a very useful part of the manual which will save you a lot of time related to finding a solution. 90% of the problems with a Canon MP460 are common to many users. Read to optimally use the Canon MP460 and not to consume more power than is necessary for the proper operation of the product. You will learn what additional features can help you use the product Canon MP460 in a comfortable way and what functions of your device are the best to perform specific tasks. It is good to get acquainted with it to avoid disappointments resulting from a shorter exploitation time of the product Canon MP460 than expected. However, if you cannot be convinced to collect manuals at your home, our website will provide you with help.

You should find here the manuals for most of your devices, including Canon MP460. Although it has only wired connection, it doesn't really matter since it has a simple set up to connect the computer to this printer. It has also more features that will provide only the best performance with this color printer. This is the key that makes this color printer perform with amazing performance to support your business. With the quality of 4,800 x 1,200 dpi resolution for its printing function, this printer will be able to print up to 17 ppm. It will give you another benefit that you can only find in this printer. This is the speed that will be fine to support your small office. Moreover, it has a sufficient input paper tray of 100 sheets capacity that will support the productivity of your business with the right performance performed by Canon PIXMA MP460. Subject to certain terms and conditions. See [www.canontechsupport.com](http://www.canontechsupport.com) for details. You can download a driver on the links we provided. Select it and press Continue. When you have already completed the downloading process, it will be saved in

the certain folder. Do not worry, the installation will be started automatically. Find a minus sign on it. If find any broken link or some problem with this printer please let us know, we will fix it as soon as possible. You don't have to go to the official Canon site, simple way to download it, just click on the link that we have provided, and don't forget to follow the manual instruction or you can download a user manual for your printer on this link below. Find out more. Okay, thanks. Using the online preview, you can quickly view the contents and go to the page where you will find the solution to your problem with Canon PIXMA MP460. To start viewing the user manual Canon PIXMA MP460 on full screen, use the button Fullscreen. However, if you do not want to take up too much of your disk space, you can always download it in the future from ManualsBase.

The option to print the manual has also been provided, and you can use it by clicking the link above Print the manual. You do not have to print the entire manual Canon PIXMA MP460 but the selected pages only. paper. If you want to quickly view the content of pages found on the following pages of the manual, you can use them. You may find documents other than justDe Klep Is Dicht. Kopieren We keep our list of direct Canon PIXMA MP460 driver and firmware links uptodate so they are easy to find when you need them. Installation starts automatically. You may download and use the Content solely for your personal, noncommercial use and at your own risks. By parts code you can check what other devices it is used. You can print your Parts List or export to Excel to further work with it. We only help you to create your parts list for request from your suppliers. Add your headers and comments. Use saved Parts Lists as templates to create new lists. Change the contents of the old list and save it as new. You can add, delete list items, change headers, comments and quantity of spare parts. Les cartouches FINE suivantes sont compatibles avec cette machine. Nasledujici kazety FI NE jsou kompatibilni s timto p r istrojem. Selle masinaga uhilduvad allpool margitud FINEkassetid. Ar so iek a rtu ir savienojamas sekojos a s FINE ka setnes. Az alabbi FINE patronok has znalhatok a keszulekkel. Slede c e FINE kartuse so primerne za to napravo. S tymto zariadenim su kompatibilne nasledovne kazety FINE FINE Cartridge. The following FINE Cartridges High Yield are also compatible with this machine. Les cartouches FINE haut rendement suivantes sont compatibles avec cette machine. Nasledujici kazety FI NE vysoce vynosne jsou take k ompatibilni s timto p r istrojem. Selle masinaga uhilduvad ka allpool margitud FI NEkassetid suure tootlikkusega. Ar so iek a rtu ir savienojamas sekojos a s FINE kasetnes ar augstu pl u st am i bu.