



File Name: canon powershot s400 user manual.pdf

Size: 4372 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 14 May 2019, 19:11 PM

Rating: 4.6/5 from 623 votes.

Status: AVAILABLE

Last checked: 5 Minutes ago!

In order to read or download canon powershot s400 user manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with canon powershot s400 user manual . To get started finding canon powershot s400 user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

canon powershot s400 user manual

This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Access your account, or create a new account, click here to get started.

Recommended Software File Name Date File Size Optional Software File Name Date File Size
Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size
The Product purchased with this limited warranty is the only PowerShot Digital Camera to which this limited warranty applies. Warranty exchange or replacement does not extend the original warranty period of the Product. The sole warranty, if any, with the respect to such nonCanon brand items is given by the manufacturer or producer thereof. This limited warranty covers all defects encountered in normal use of the Products, and does not apply in the following cases
A Canon Customer Care representative will attempt to diagnose the nature of the problem and correct it over the telephone. If the problem cannot be corrected over the telephone, you will be asked to follow the applicable procedures for MAILIN SERVICE. Note that a dated proof of purchase is required at the time of service. MAILIN SERVICE is a program under which your Product is repaired by a Canon U.S.A. or a Canon Canada authorized service center for the Product. You will be given the name, address and phone number of an authorized service center. It is your responsibility to properly package and send the defective Product, together with a copy of your dated proof of purchase, a complete explanation of the problem and a return address to the authorized service center at your expense. Do not include any other items with the defective Product. The Product covered by this limited warranty and proven to be defective upon inspection will be repaired and returned to you without charge by the authorized service center. <http://dealmakersmachinery.com/admin/images/junkers-user-manual.xml>

- **canon powershot s400 user manual, canon powershot s400 user manual pdf, canon powershot s400 user manual download, canon powershot s400 user manual free, canon powershot s400 user manual instructions.**

Any Product received by the authorized service center that is not covered by the limited warranty will be returned unrepaired, or at the discretion of the authorized service center, you may receive a written estimate of repair at such cost as the service center may establish from time to time. Actual totals and file sizes may vary according to the subject, shooting conditions and shooting mode. Above figures show total movie capacity on various CF cards, measured under Canons standard test conditions, and may vary depending upon scene, subjects or camera settings. Direct connection to Canon CP Printers and Bubble Jet Direct Photo Printers no computer required. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store. Effectively doubles the flash range of the camera. Comes with mounting bracket. The cable connects to your camera and to the USB port on your PC or MAC Computer. Comes standard with the EOS 1Ds Mark III, 1D Mark IV, 1D Mark III, 1Ds Mark II, 1D Mark II N, 1D Mark II, 5D Mark II, 7D, 5D, 50D, 40D, 30D, 20D, 10D, Digital Rebel XTi, Digital Rebel XT and Digital Rebel. Please see Compatibility tab for compatible models. Four pieces of weight, plastic pins and weight securing screws are included in the WWDC1 package. You may use nonCanon brand accessories with this digital camera. However, Canon makes no warranties concerning, and is not responsible for damages resulting from, use of nonCanon brand accessories. Please be aware of this and take care when operating the camera for an extended period. About the LCD Monitor The LCD monitor is produced with extremely high precision manufacturing techniques. As in the example below, the mode dial should be set to Using the Selftimer White buttons indicate the button that will be pushed

in the particular procedure. Read This First Please Read. 7 Safety Precautions. 7 Preventing Malfunctions. 11 Quick Start Section Quick Start Section.<http://www.ppkh.net/userfiles/junkers-supratar-manual.xml>

12 Components Guide Front View. 14 Back View. 15 Operation Panel. Please be advised. It could lead to overheating, burns and other injuries. Use the supplied terminal cover or battery case to transport or store the battery pack. In addition, do not touch the surface of the flash after taking several pictures in rapid succession. The resulting heat buildup could damage the flash. The charge indicator lights red while charging and changes to green when the battery pack is charged. Two beeps will sound when the autofocus is set. Press the shutter button all the way. The shutter sound will sound once when the shot is complete. The recorded image displays for approximately 2 seconds. Battery Pack NB1L optional can also be used with the camera. Please recharge the battery pack p. 18 before you use it for the first time. Battery pack charge is low. Recharge it as soon as possible before it is required for an extended period. Power Lamp The Language menu can also be displayed in replay mode by holding down the This function cannot be used while a direct print compatible printer CP series, optional or the direct print compatible Bubble Jet Printer optional is connected to the camera or while replaying movies. Reset the date and time when this occurs p. The image in the LCD monitor will darken in strong sunlight or bright light. This does not constitute a malfunction. Single Image Replay p. Replay Mode Standard Display File Number Image Number Shooting Date Information Displayed Shooting Mode Exposure Compensation Long Shutter Mode White Balance. A sound file in a format other than the WAVE format is attached or the file format is not recognized. JPEG file with format not conforming to Design rule for Camera File System Standards RAW format file File with unrecognized format. Pressing Halfway Pressing halfway automatically sets the exposure, focus and white balance. Shots cannot be taken while the flash is charging.

Menus are displayed by pressing the Use the LCD monitor to perform the following procedures. See Menu Settings and Factory Defaults p. Use the Press the The menu will close. Basic Functions My Camera Menu Setting Options Completing the Procedure Completing the Procedure. Items Set with the Menu Item Exposure Compensation Long Shutter White Balance ISO Speed Color Effect Compression Still images Resolution Still images Resolution Movie Items Set with the Menu Item. Menu Startup Vol. Yellow Operation Vol. Selftimer Vol. File No. Each menu item has three choices. Example Startup Image option features science fiction related images and sounds. The option features animals. Changing My Camera Settings Select an item in the My Camera menu. However, CF card images shot with this camera can be registered as My Camera settings regardless of the below formats. Auto Manual Stitch Assist Movie Some settings selected in each shooting mode are saved when the power is turned off p. 161. In the descriptions of the shooting functions that follow, the icons beside the titles indicate the applicable shooting modes. You can also review it with the following procedures. RedEye The redeye reduction lamp fires with each shot, Reduction automatically adjusting the intensity to suit lighting Auto levels. Flash On The flash fires with every shot. Flash Off The flash will not fire. In the Rec. menu, select The digital zoom cannot be used when the LCD monitor is turned off. The actual figures will vary according to the shooting conditions and settings. Shooting. To merge the images on a computer, use PhotoStitch, one of the supplied programs. These times may vary with the subject and shooting conditions. Recording will automatically stop when the maximum is reached or when the CF card runs out of free capacity. QuickTime for Windows is included on the Canon Digital Camera Solution Disk. On the Macintosh platform, this program is generally bundled with Mac OS 8.5 or later operating systems.

Moreover, the focus remains locked after the picture is taken, allowing you to capture a second image with the same focus. This is effective when the contrast is too strong between the subject and background or when a subject is backlit. You must set the flash to flash fires. The FE lock may also

release if you press any button other than the button. When the center AF frame is selected, the AF frame will appear in the LCD monitor if it is turned on p. Appropriate for standard shooting conditions, including backlit scenes. The camera divides images Evaluative into several zones for light metering. It evaluates Light complex lighting conditions, such as the position of the subject, the brightness, the direct light, and the Metering backlighting, and adjusts the settings to the correct. This camera, however, applies special processing to images shot at shutter speeds slower than 1.3 seconds to eliminate the noise, thereby producing highquality images. Auto The camera sets the white balance automatically according to shooting conditions. Daylight For recording outdoors on a bright day. Cloudy For recording under overcast, shady or twilight skies. Setting a Custom White Balance You can set a custom white balance to obtain the optimal setting for the shooting conditions by having the camera evaluate an object, such as a piece of white paper or cloth, or a photoquality gray card that you wish to establish as the standard white color. The correct white balance may not be obtained when the exposure setting is incorrect image appears completely black or white. Photo Effect Off Records with no effect. Vivid Neutral Low Sharpening Records subjects with softened outlines. Sepia Emphasizes the contrast and color saturation to record bold colors. Tones down the contrast and color saturation to record neutral hues. To take clean images, use as low an ISO speed as possible. The file number is reset to the start 1000001 each time a new CF card is inserted.

New images recorded on CF cards with existing files are assigned the next available number. The file number of the last image to be shot is memorized so that images recorded to a new CF card start from the next number. Holding the button down advances the images more rapidly, but the images will not appear as clearly. Protected movies and movies less than 1 second in duration cannot be edited. Switch to the movie editing mode p. If the battery pack runs out of charge partway through, edited movie clips cannot be saved. When editing movies, use a fully charged battery pack or the separately sold AC Adapter Kit ACK500 P. Slide show image settings are based on DPOF standards p. 111. All Images Slide Show 13 In the Play menu,. Images display in the order of their selection. Sets the duration that each image displays. Choose between Play Time 310 seconds, 15 seconds, 30 seconds and Manual. Sets whether the slide show stops when all the slides have Repeat been displayed or continues until stopped. The direct print print compatible CP series printers. Digital Print Order Format Digital Camera CF Card print settings set in advance on your camera.The following diagrams illustrate how to use the Print menu. Direct Print Function Set the Mode Switch to DPOF Print Settings Set the Mode Switch to. Selects items and settings. Sets items and settings. Image p. 107 Paper p. 107 Style Borders p. 107 Date p. 107 Number of Copies p. 107 Trimming p. 109 Order Number of Copies p. 111 Print Type p. 114 Date p. You can also print using DPOF print settings. You are recommended to use the optional AC Adapter Kit ACK500 sold separately rather than the battery pack to power the camera when it is connected to a printer. Connecting to a Bubble Jet Printer Please read the Quick Start Guide supplied with your Bubble Jet printer to see if it is compatible with the camera's direct print function, and for instructions regarding the connection cables and the printer's general operation.

Options for the Style category will differ slightly for Bubble Jet printers. Print images displayed in single image replay or index replay mode.The printer will stop after the current print is complete and the camera will display its replay screen at that point. Bubble Jet Printer Paper Borderless. The shape of the trimming frame is determined by the print style selection image, paper, borders, date. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print compatible printer CP series or a direct print compatible Bubble Jet printer. The Index setting only produces one print copy. The print type resets to Standard and the Date and File No.You cannot set the date to print with the Style menu in Step 2 above. Please note however, that the date will not print if the print type is set to Index even if it is turned On in Step 1. Please use the software supplied with the camera to actually transfer the images to an email program. Please read the Software Starter Guide for image transfer instructions. This is useful for downloading images to a

computer in which the software is not installed. Eject the CF card from the camera and insert it into a CF card reader connected to the computer. Adds sound memos to images. Deletes all images from a CF card except for protected images. Selects the images that will be transferred to your email software. Format Formats initializes CF cards. These are called the My Camera settings. You can also customize the for each item with images recorded on the CF card and newly recorded sounds or by using the supplied software. Memory card error! Memory card full Naming error. Change the battery pack No image Image too large Incompatible JPEG format List of Menu Options and Messages Image is being recorded to, or read from, CF card. Note the number and contact your Canon Customer Support Help Desk.

If an error code displays directly after taking a picture, the shot may not have been recorded. No Paper No Ink Incompatible paper size Incompatible ink size Ink Cassette Error. On Bubble Jet Printers with operation panels, check the error number displayed on the panel and refer to the Bubble Jet Printer Quick Start Guide. Turn the camera power off before connecting or disconnecting the AC adapter. Always ensure that the automobile's engine is running when you use the car battery charger. Use of it with the engine off may flatten the battery in some automobiles. Consult the nearest Canon Customer Support Help Desk. Solution. This occurs more frequently when shooting at the wideangle end. Subject to change without notice.Exif Print is a standard for enhancing the communication between digital cameras and printers. By connecting to an Exif Printcompliant printer, the camera's image data at the time of shooting is used and optimized, yielding extremely high quality prints. The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules. The settings selected in each shooting mode are saved after you finish shooting. Function Large Medium 1 Medium 2 Resolution Small Movie Movie. Please be aware of this and take care when operating the camera for an extended The LCD monitor is produced manufacturing techniques. This has an effect on the recorded image and does not constitute Please. Please Read. Safety Precautions. Preventing Malfunctions Quick Start Section. Front View. Back View. Operation Panel. Indicators. Charging the Battery Pack. Erasing All Images. Formatting Connecting a Printer. Printing. Setting the Print Settings Direct Print Function. 107 Setting the DPOF Print Settings. Selecting Images for Transferring. For Canon Customer Support contacts, please see the Canon Limited Warranty supplied with your camera.

The use of these substances may lead to fire. It could lead to overheating, burns and other injuries. Use the supplied terminal cover or battery case to transport or store the battery pack. The charge indicator lights red while charging and changes to green when the battery pack is charged. Battery Pack NB1L optional can also be used with tile camera. Recharge it as soon as possible before it is required for an extended period.Power Lamp The Language menu can also be displayed in replay mode by holding down the SET button and pressing the MENU button. This function cannot be used while a direct print compatible printer CP series, optional or the direct print compatible Bubble Jet Printer optional while replaying movies. The image in the LCD monitor will darken in strong sunlight or bright light. Single Image Replay p. A sound file in a format other than the WAVE format is attached or the file format is not recognized. JPEG file with format not conforming to Design rule for Camera File System Standards RAW format file File with unrecognized format. Pressing Halfway Pressing halfway automatic Any sets the exposure, focus and white balance. Shots cannot be taken while the flash is charging. Selecting Menu Settings Shooting Mode only Press the FUNC. Items Set with the FUNC, Button Menu Item Exposure Compensation Long Shutter White Balance ISO Speed Photo Effect Compression Still images Resolution Still images Resolution Movie Items Set with the MENU Button Menu Item AiAF Cont Shooting Self timer. Each menu item has three choices. Registering CF Card Images and Sounds select an item in the My Camera menu. However, CF card images shot with this camera can be registered as My Camera settings regardless of the below formats. Before you proceed with Step 1 in each case, set the camera to one of the

shooting modes indicated by the icons in the title p. RedEye The redeyereduction lamp fires with each shot, Reduction automatically adjusting the intensity to suit lighting Auto levels.

FlashOn The flash fires with every shot. FlashOff The flash will not fire. The flash timing is adjusted to slow shutter speeds. This reduces the chance that the background will be dark SlowSynchro when shots are taken at night or in rooms with artificial lighting. The actual figures will vary according to the shooting conditions and settings. memory fills. the flashes charging as you shoot. To merge the images on a computer, the supplied programs. Framing a Subject Tile PhotoStitch program detectsthe overlapping portions of adjoining images and merges them. The final image will appear unnatural if the contrast in brightness is too great. These times may vary with the subject and shooting conditions. Recording will automatically stop when the maximum is reached or when the CF card runs out of free capacity. This is effective when the contrast is too strong between the subject and background or when a subject is backlit. The AE lock cannot be set if the flash fires. This camera, however, applies special processing to images shot at shutter speeds slower than 1.3 seconds to eliminate thereby producing high quality certain amount of processing time may be required before the next image can be shot. The menu displays again the settings easily. Photo Effect Off Vivid Neutral Low Sharpening Sepia Phot Efie ct Records with no effect. Emphasizes the contrast and color saturation to record bold colors. Tones down the contrast and color saturation to record neutral hues. Holding the button down advances the images more rapidly, but the images will not appear as clearly. If the battery pack runs out of charge partway through, edited movie clips cannot be saved. Images display in the order of their selection. Play Time Sets the duration that each image displays. Choose between 310 seconds, 15 seconds, 30 seconds and Manual. Sets whether the slideshow stops when all the slides have Repeat beendisplayed or continues until stopped. When that happens, reformat.

The following diagrams illustrate how to use the Print menu. Connecting to a Bubble Jet Printer Please read the Quick Start Guide supplied with your Bubble Jet printer to see if it is compatible print function, and for instructions regarding cables and the printers general operation. Orient the cable so that the word Canon on the connector faces the cameras front panel. Movies cannot be printed. The printer will stop after the current print is complete will display its replay screen at that point. Bubble Jet Printer Paper Borders. The shape of the trimming style selection image, paper, borders, date. Set the print style before setting the printing by the DPOF print settings if frame is determined. The print type resets to Standard and the Date and File No. The settings used on the camera comply with the Digital Print Order Format DPOF standards. A checkmark displays on selected images. You must shut the TV and camera power off before you attach or detach the AV cable. Install the driver and the software applications bundled on the Canon Digital Camera Solution Disk. Please see the Software Starter Guide for information requirements and installation instructions. Tile LCD monitor will turn on in replay mode and then blank out when the connection to the computer is complete. This is useful for downloading images to a computer in which the software is not installed. Eject the CF card from the camera and insert it into a CF card reader connected to the computer. If you are using a PC card reader, first insert the CF card into a PC card adapter sold separately, adapter. AFassist Beam Sets the AFassist Beam to on or off. Digital Zoom Sets whether or not the optical zoom is supplemented by digital processing. Review Sets the duration images display on the LCD monitor after the shutter button releases. Erase all Deletes all images from a CF card except for 3rotated images. SlideShow Plays images in automated slide shows. Options Reference Page.

Selects the images that will be transferred to your email software. Format Formats initializes CF cards. Operation Vol. Adjusts the volume of the operation sound. Selftimer Vol, Adjusts the volume of the selftimer sound played 2 sec. File No, Reset Sets how file numbers are assigned to images when new CF cards are inserted. These are called the My Camera settings. Memory card error! Memory

card full Naming error. Change the battery pack No image Image too large Incompatible JPEG format may appear on the LCD monitor while Image is being recorded from, CF card You attempted images. Note the number and contact your Canon Customer Support Help Desk. If an error code displays directly after taking a picture, the shot may not have been recorded. List of Messages Displayed while a Direct Print Function Compatible Bubble Jet Printer is Connected The following messages may appear on the camera's LCD monitor while a direct print function compatible BubbleJet printer sold separately is connected. On Bubble Jet Printers with operation panels, check the error number displayed on the panel and refer to the Bubble Jet Printer Quick Start Guide. Turn the camera power off before connecting/disconnecting the AC adapter Compact Power Adapter CAPSS00 Battery DC Coupler Lock DR500 Use only an AC adapter kit other than ACK500 malfunction in the camera or kit. Consult the nearest Canon Customer Support Help Desk. Solution. Flash is set to off Flash does not fire Incorrect video Image not. Subject to change without notice. Exif Print is a standard for enhancing the communication between digital cameras and printers. The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules. Please try again. Please try again. In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading.

Register a free business account Please try your search again later. And all wrapped up in an extraordinarily beautiful and robust metal case. Advancements It features a 4 megapixel sensor, 3x optical zoom, an improved 3.6x digital zoom, and movie mode for videos of up to three minutes. A stainless steel shell protects the camera, while a new finish Super Hard Ceramix mixes metals and ceramics to produce a tough, cool-toned exterior that is visually stunning. Optics and Resolution Featuring a 4.0 megapixel CCD sensor, the PowerShot S400 delivers a wide range of detail and color with images up to 2,272 x 1,704 pixels and prints beyond 11 by 14 inches. Movie Mode Shoot up to three minutes of MPEG video at resolutions up to 320 x 240 pixels with sound, editing controls, and VCR-like playback. The movies aren't camcorder quality, but they're fun and convenient, and they're perfect as email attachments. The camera can also attach voice memos or sound files of up to 60 seconds to each image. More Features You can select from evaluative, center-weighted, and spot-metering modes depending on the subject matter, and can even choose to set shutter speeds and apertures manually. An ISO range of 50 to 400 ensures practical shutter speeds in a wide variety of lighting situations, while a multifunctional, built-in flash offers a maximum reach of 3.5 meters in Auto ISO mode. Canon's DIGIC DIGital Imaging Core processor ensures excellent color rendition and white balance for every shot, as well as superfast auto focusing, noise-free imaging, and advanced flash exposure performance. 1.5-inch TFT transreflective LCD monitor. Built-in flash with auto, on, off, manual, slow sync, and red-eye reduction modes. Shot modes include manual, auto, and stitch assist. White balance modes include daylight, cloudy, tungsten, fluorescent, and more. Histogram display for checking exposure and contrast levels in images stored on the memory card.

Built-in orientation sensor automatically rotates portrait pictures, and these images remain rotated when downloaded, saving time during in-computer image processing. Printing Canon has introduced a series of printers designed to work directly with its lineup of digital cameras. Using these printers, no computer is required—simply connect the camera to the printer and start printing. Printers include Canon's bubble jet direct printers S830D and S530D, and card photo printer CP100. Of course, photos from your camera can also be printed on any home computer system with an inkjet printer, sent off for online processing, or simply enjoyed on your computer screen. Power, Size, and Contents The camera is powered by a rechargeable lithium-ion battery NB1LH included. It measures 3.4 by 2.2 by 1.1 inches and weighs 6.5 ounces without battery. This package includes the PowerShot S400 digital camera, 32 MB CompactFlash card, battery and battery charger CB2LS, USB and AV cables, wrist strap, and ArcSoft Camera Suite CD-ROM and USB drivers for Windows and Mac. To calculate

the overall star rating and percentage breakdown by star, we don't use a simple average. Instead, our system considers things like how recent a review is and if the reviewer bought the item on Amazon. It also analyzes reviews to verify trustworthiness. Please try again later. A User 1.0 out of 5 stars This is our third digital camera one other Canon and one Nikon and this was the best of the three. For the most part, I was satisfied with the images, but many required redeye fixing or tweaking of the levels. Bright light pictures were usually very washed out. Shottoshot and powering up times were good. I would give the camera a rating of 3.5 or maybe even 4 stars if it still actually worked. The message only happened on occasion, and I could power it off and on a few times and eventually the camera would work. It was annoying for sure but at least still sort of functional.

Two months later, there was nothing I could do to get rid of the error message and the camera became completely useless. It made it to the ripe old age of 16 months. I called Canon, and they said I could send the camera in to their repair shop, and they would mail me an estimate. Even the service rep.If your heart is set on buying this camera, please dont do so without buying an extended warranty. You will most likely be VERY happy you did. I had to use my warranty purchased at Best Buy on my previous Canon, and the customer service was outstanding. There was no outofpocket charge for completely repairing my broken camera. They even took the liberty of replacing the outer pieces so it looked like a new camera. My only minor gripe was that I was without a camera for almost two weeks. BIG MISTAKE!! To those of you who have just purchased this camera, consider selling it before this defect sets in for you and the camera is worthless. Canon I am SO disappointed in you. This defect happens more often than not, and you wont recall the camera or do anything to help those of us who made a substantial investment little over a year ago. I guess you knew what you were thinking when you gave the camera a oneyear warranty. If I sound bitter, it is probably because I am.I cant afford to buy a new camera every year. The sad thing is, my next camera will probably be the Canon S2 IS because it is such a fantastic camera and I would like to have the 12x zoom capabilities. But you can bet that I wont buy it without an extended warranty!Versus the S330, the S400 Has a stepping zoom 7 steps instead of a continual zoom Is much more sensitive to camera jitter shake in noflash lowlight photography. If you plan to do that sort of photography, you WILL need a tripod. This is the most sensitive to shake in noflash lowlight photography digital Ive used yet. Conversely, if you do use a tripod, those noflash pictures come out REALLY well for the same reasons of sensitivity.